

1. INSTRUCTIONS FOR USE .....	24
2. SAFETY PRECAUTIONS .....	26
3. ENVIRONMENTAL CARE.....	28
4. GET TO KNOW YOUR OVEN.....	29
5. USING THE OVEN .....	31
6. CLEANING AND MAINTENANCE .....	35
7. EXTRAORDINARY MAINTENANCE .....	39
8. OVEN INSTALLATION .....	41

THESE INSTRUCTIONS ARE VALID ONLY FOR THE DESTINATION COUNTRIES WHOSE IDENTIFYING SYMBOLS ARE INCLUDED ON THE COVER OF THIS MANUAL.



**INSTRUCTIONS FOR THE USER:** these contain user advice, the description of the controls and the correct procedures for cleaning and maintenance of the appliance.



**INSTRUCTIONS FOR THE INSTALLER:** these are intended for the qualified technician who must install the appliance, set it functioning and carry out an inspection test.



## 1. INSTRUCTIONS FOR USE



THIS MANUAL IS AN INTEGRAL PART OF THE APPLIANCE. IT MUST BE KEPT IN ITS ENTIRETY AND IN AN ACCESSIBLE PLACE FOR THE WHOLE WORKING LIFE OF THE APPLIANCE.

CAREFUL READING OF THIS MANUAL AND ALL THE INSTRUCTIONS THEREIN BEFORE USING THE APPLIANCE IS ESSENTIAL. INSTALLATION MUST BE CARRIED OUT BY QUALIFIED PERSONNEL IN ACCORDANCE WITH THE REGULATIONS IN FORCE. THIS APPLIANCE IS INTENDED FOR PROFESSIONAL USE AND CONFORMS TO THE EEC DIRECTIVES CURRENTLY IN FORCE. THE APPLIANCE HAS BEEN BUILT TO CARRY OUT THE FOLLOWING FUNCTION: COOKING FOOD; ALL OTHER USES ARE CONSIDERED UNSUITABLE.

THE MANUFACTURER CANNOT BE HELD LIABLE FOR USES OTHER THAN THOSE INDICATED.



IF THE APPLIANCE IS INSTALLED ON BOATS OR IN CARAVANS, DO NOT USE IT AS A ROOM HEATER.



DO NOT USE THIS APPLIANCE FOR HEATING ROOMS.



THIS APPLIANCE IS MARKED ACCORDING TO EUROPEAN DIRECTIVE 2002/96/EC ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE).

THIS DIRECTIVE DEFINES THE STANDARDS FOR THE COLLECTION AND RECYCLING OF WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT APPLICABLE THROUGHOUT THE EUROPEAN UNION.



NEVER OBSTRUCT THE OPENINGS AND SLOTS PROVIDED FOR VENTILATION AND HEAT DISPERSAL.



DO NOT REST ANY WEIGHT OR SIT ON THE OPEN DOOR OF THE APPLIANCE.



THE IDENTIFICATION PLATE WITH THE TECHNICAL DATA, SERIAL NUMBER AND BRAND NAME HAS BEEN VISIBLY AFFIXED TO THE APPLIANCE.

**DO NOT REMOVE THIS PLATE FOR ANY REASON.**



BEFORE THE APPLIANCE IS PUT INTO OPERATION, ALL THE PROTECTIVE FILMS APPLIED INSIDE OR OUTSIDE MUST BE REMOVED.



TAKE CARE THAT NO OBJECTS ARE STUCK IN THE DOOR OF THE OVEN.



## General instructions

GB-IE



THE APPLIANCE BECOMES VERY HOT INSIDE DURING USE. SUITABLE HEAT-PROOF GLOVES SHOULD BE WORN FOR ALL OPERATIONS.



TRAYS MUST BE WASHED BEFORE USE WITH A SUITABLE DISHWASHING LIQUID (DO NOT USE ABRASIVE PRODUCTS).



THE OVEN IS DESIGNED FOR A MAXIMUM LOAD OF 3.5 KG.



DO NOT USE STEEL SPONGES AND SHARP SCRAPERS AS THEY WILL DAMAGE THE SURFACE.

USE NORMAL NON-ABRASIVE PRODUCTS AND A WOODEN OR PLASTIC TOOL IF NECESSARY. RINSE THOROUGHLY AND DRY USING A SOFT CLOTH OR A MICROFIBRE CLOTH.

DO NOT ALLOW RESIDUES OF SUGARY FOODS (SUCH AS JAM) TO SET INSIDE THE OVEN. IF THEY ARE ALLOWED TO SET FOR TOO LONG, THEY COULD RUIN THE SURFACES OF THE OVEN.



DO NOT USE PLASTIC KITCHENWARE OR CONTAINERS. THE HIGH TEMPERATURES INSIDE THE OVEN COULD MELT THE PLASTIC, DAMAGING THE APPLIANCE.



DO NOT USE SEALED TINS OR CONTAINERS IN THE APPLIANCE. OVERPRESSURE MAY OCCUR INSIDE THE CONTAINERS DURING COOKING, CREATING A DANGER OF EXPLOSION.



DO NOT LEAVE THE APPLIANCE UNATTENDED DURING COOKING OPERATIONS WHERE FATS OR OILS COULD BE RELEASED. FATS AND OILS MAY CATCH FIRE.



DO NOT COVER THE BOTTOM OF THE OVEN WITH ALUMINIUM OR TINFOIL SHEETS DURING COOKING AND DO NOT PLACE PANS OR TRAYS ON IT TO AVOID DAMAGE TO THE SURFACE.



ALL COOKING OPERATIONS MUST TAKE PLACE WITH THE DOOR CLOSED.



## 2. SAFETY PRECAUTIONS

CONSULT THE INSTALLATION INSTRUCTIONS FOR SAFETY STANDARDS ON ELECTRICAL OR GAS APPLIANCES AND FOR VENTILATION FUNCTIONS.

IN YOUR INTEREST AND FOR YOUR SAFETY THE LAW REQUIRES THAT THE INSTALLATION AND SERVICING OF ALL HOUSEHOLD APPLIANCES IS CARRIED OUT BY QUALIFIED PERSONNEL IN ACCORDANCE WITH THE REGULATIONS IN FORCE.

OUR APPROVED INSTALLERS GUARANTEE A SATISFACTORY JOB.

GAS OR ELECTRICAL APPLIANCES MUST ALWAYS BE DISCONNECTED BY SUITABLY SKILLED PEOPLE.



BEFORE CONNECTING THE APPLIANCE TO THE POWER GRID, CHECK THE DATA ON THE PLATE AGAINST THE DATA FOR THE GRID ITSELF.



BEFORE CARRYING OUT INSTALLATION / MAINTENANCE WORK, MAKE SURE THAT THE APPLIANCE IS NOT CONNECTED TO THE POWER GRID.



THE PLUG TO BE CONNECTED TO THE POWER SUPPLY CABLE AND ITS SOCKET MUST BE OF THE SAME TYPE AND CONFORM TO THE REGULATIONS IN FORCE. THE SOCKET MUST BE ACCESSIBLE AFTER THE APPLIANCE HAS BEEN BUILT IN. NEVER UNPLUG BY PULLING ON THE CABLE.



IF THE POWER CABLE IS DAMAGED, REPLACE IT IMMEDIATELY.



THE APPLIANCE MUST BE CONNECTED TO EARTH IN COMPLIANCE WITH ELECTRICAL SYSTEM SAFETY REGULATIONS.



IMMEDIATELY AFTER INSTALLATION, CARRY OUT A BRIEF INSPECTION TEST, FOLLOWING THE INSTRUCTIONS BELOW. SHOULD THE APPLIANCE NOT FUNCTION, DISCONNECT IT FROM THE POWER SUPPLY AND CALL THE NEAREST TECHNICAL ASSISTANCE CENTRE. NEVER ATTEMPT TO REPAIR THE APPLIANCE.



NEVER PLACE FLAMMABLE OBJECTS IN THE OVEN: IF IT SHOULD ACCIDENTALLY BE SWITCHED ON, THIS MIGHT CAUSE A FIRE.



DURING USE THE APPLIANCE BECOMES VERY HOT. TAKE CARE NEVER TO TOUCH THE HEATING ELEMENTS INSIDE THE OVEN.



THE APPLIANCE IS DESIGNED FOR PROFESSIONAL USE BY TRAINED PERSONS. DO NOT LET CHILDREN GO NEAR THE APPLIANCE WHEN IT IS IN OPERATION OR PLAY WITH IT AT ANY TIME.



## General instructions

GB-IE



DO NOT INSERT POINTED METAL OBJECTS (CUTLERY OR UTENSILS) INTO THE SLOTS IN THE APPLIANCE.



DO NOT USE STEAM JETS FOR CLEANING THE APPLIANCE.  
THE STEAM COULD REACH THE ELECTRONICS, DAMAGING THEM AND CAUSING SHORT-CIRCUITS.



DO NOT MODIFY THIS APPLIANCE.



DO NOT SPRAY ANY SPRAY PRODUCTS NEAR THE HOUSEHOLD APPLIANCE WHILE IT IS IN OPERATION.  
DO NOT USE SPRAY PRODUCTS WHILE THE PRODUCT IS STILL HOT.



**The manufacturer declines all responsibility for damage to persons or things caused by non-observance of the above prescriptions or by tampering with any part of the appliance or by the use of non-original spare parts.**



### 3. ENVIRONMENTAL CARE

#### 3.1 Our environmental care

---



Pursuant to Directives 2002/95/EC, 2002/96/EC and 2003/108/EC relating to the reduction of the use of hazardous substances in electrical and electronic appliances, as well as to the disposal of refuse, the crossed out bin symbol on the appliance indicates that the product, at the end of its working life, must be collected separately from other refuse. Therefore, the user must consign the product that has reached the end of its working life to the appropriate selective collection centres for electrical and electronic refuse, or deliver it back to the retailer when purchasing an equivalent product, on a one for one basis. Adequate selective collection for the subsequent forwarding of the decommissioned product to recycling, treatment and ecologically compatible disposal contributes to avoiding possible negative effects on the environment and on health and promotes the recycling of the materials of which the appliance consists. Illicit disposal of the product by the user will lead to the application of administrative sanctions.

The product does not contain substances in quantities sufficient to be considered hazardous to health and the environment, in accordance with current European directives.

#### 3.2 Your environmental care

---

Our product's packaging is made of non-polluting materials, therefore compatible with the environment and recyclable. Please help by disposing of the packaging correctly. You can obtain the addresses of collection, recycling and disposal centres from your retailer or from the competent local organisations.



**Do not discard the packaging or any part of it, or leave it unattended. It can constitute a suffocation hazard for children, especially the plastic bags.**


Your old appliance also needs to be disposed of correctly.

**Important:** hand over your appliance to the local agency authorised for the collection of electrical appliances no longer in use. Correct disposal enables intelligent recovery of valuable materials.

Before disposing of your appliance it is important to remove doors and leave shelves in the same position as for use, to ensure that children cannot accidentally become trapped inside during play. It is also necessary to cut the connecting cable to the power supply network, removing it along with the plug.




## 4. GET TO KNOW YOUR OVEN

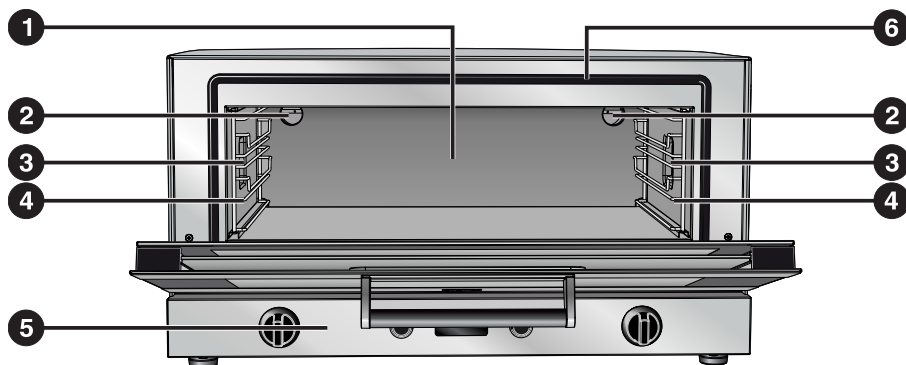

- 1** Oven interior in glazed fire-stone
- 2** Steam discharge
- 3** Oven light
- 4** Rack/tray support frames (Standard frames are shown for illustrative purposes)
- 5** Control panel
- 6** Gasket



#### 4.1 DESCRIPTION OF THE CONTROLS

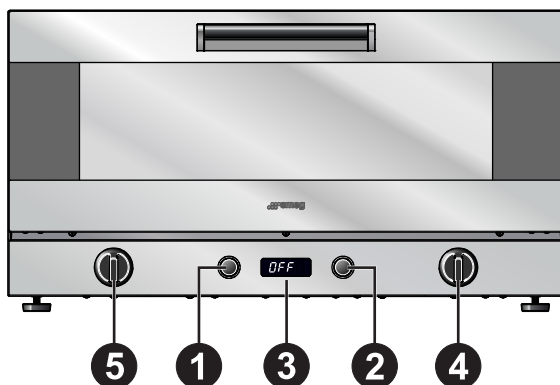

- 1 START BUTTON:** This button allows you to start cooking.
- 2 STOP BUTTON:** This button allows you to stop cooking at any time.
- 3 DISPLAY:** Displays the selected program and relative cooking parameters.
- 4 PROGRAM SELECTION KNOB:** It allows you to set the cooking operation using one of the programs, to select the cooking temperature and time.
- 5 STEAM DISCHARGE KNOB:** During cooking, this knob allows you to eliminate the steam produced after cooking food. The discharge settings range from 0 to 1 and all the intermediate zones can be used.







## 5. USING THE OVEN



The oven is designed for a maximum load of 3.5 kg.

### 5.1 General warnings and advice



When using the oven for the first time, heat it up to its maximum temperature for a time long enough to burn off any oily residues from the manufacturing process.

### 5.2 Choice of programs

This appliance allows you to select **40** cooking programs including:

- 39 programs that can be edited and saved as the user wishes;
- 1 preheating program with delayed start "P40";

Below we provide a table of the heating elements power splitting for each program:

Prog	Upper	Lower	Prog	Upper	Lower
1	100%	10%	22	80%	100%
2	100%	10%	23	80%	100%
3	100%	10%	24	80%	100%
4	100%	30%	25	60%	10%
5	100%	30%	26	60%	10%
6	100%	30%	27	60%	10%
7	100%	60%	28	60%	30%
8	100%	60%	29	60%	30%
9	100%	60%	30	60%	30%
10	100%	100%	31	60%	60%
11	100%	100%	32	60%	60%
12	100%	100%	33	60%	60%
13	80%	10%	34	60%	100%
14	80%	10%	35	60%	100%
15	80%	10%	36	60%	100%
16	80%	30%	37	0%	100%
17	80%	30%	38	0%	100%
18	80%	30%	39	100%	0%
19	80%	60%	40	100%	10%
20	80%	60%			
21	80%	60%			



Power splitting percentages cannot be edited by the user.



### 5.3 Editing / saving a program

---

The oven has 39 programs that can be modified by the user (from **P01** to **P39**). To set the operating parameters of a program:

- 1 Turn the knob to the **+** or **-** symbol to select the program you wish to save/edit.
- 2 Keep the **"PUSH"** knob pressed for 3 seconds: the display will show the cooking temperature.
- 3 Turn the knob to the **+** or **-** symbol to set the cooking temperature.
- 4 Press the **"PUSH"** knob: the display will show the cooking time.
- 5 Turn the knob to the **+** or **-** symbol to set the cooking duration time (from 1 to 99 min or INF infinite).
- 6 Press the **"PUSH"** knob to exit from the data setting and saving phase. The message **"PEnd"** will appear on the display and the parameters will be saved.
- 7 After 3 seconds the display will show the parameters set in rotation.
- 8 To return to the **"OFF"** status keep the **"STOP"** button pressed for 4 seconds.

### 5.4 Running a program

---

From the **"OFF"** status proceed as follows:

- 1 Turn the knob to the **+** or **-** symbol to select one of the available programs from **P01** to **P39**. The display will show the parameters of the selected program in rotation.
- 2 To start the program press the **"START"** button. The appliance will perform a preheating cycle, showing the text **"PrEh"** on the display.
- 3 When preheating is finished, a series of buzzers lasting 3 seconds will indicate that it is possible to proceed with the cooking operation. The text **"PrEh"** will flash on the display.
- 4 To start cooking, keep the **"START"** button pressed for 2 seconds. The display will show the set parameters in sequence, the time remaining until the end of cooking and the program selected.
- 5 It is possible to start cooking early before the preheating temperature is reached, by keeping the **"START"** button pressed for 3 seconds.
- 6 During the last minute of cooking, only the countdown of the remaining 60 seconds will be displayed. At the end, a buzzer will sound and the flashing **"End"** text (for 20 minutes) will indicate that cooking has been completed.
- 7 To return to the **"OFF"** status keep the **"STOP"** button pressed for 4 seconds.



## 5.4.1 Extending a cooking operation

When a cooking operation finishes, it is possible to extend it manually:

- 1 While the display is showing “**End**”, press the “**START**” button; “**tP00**” will appear on the display.
- 2 Turn the knob to the **+** or **-** symbol to set the additional minutes of cooking; at most 20 extra minutes are allowed.
- 3 To start cooking with the extra time that has just been set, press the “**START**” button for at least 2 seconds. When cooking resumes, a buzzer will sound.
- 4 At the end of cooking, “**End**” will continue to flash for the next 20 minutes and the oven light will remain on.

## 5.4.2 Modifying a program during cooking

The program can be modified during cooking:

- 1 Press the “**PUSH**” knob: the display will show the cooking temperature.
- 2 Modify the settings as described in points 3 - 8 of paragraph “5.3 Editing / saving a program”.



Changes made to the program during cooking cannot be saved.

- 3 3 seconds after the last change, the program automatically quits the modification status and saves the settings (as described in this paragraph, the modified parameters are saved solely until the end of cooking).



## 5.5 Preheating with delayed start

The program with delayed preheating is set as follows:

- Turn the knob to the **+** or **-** symbol to select the **“P40”** program.
- Press the **“PUSH”** button for at least 3 seconds; the display shows the current time flashing.
- Turn the knob to the **+** or **-** symbol to set the current time.
- Press the **“PUSH”** button; the display will show the minutes flashing.
- Turn the knob to the **+** or **-** symbol to set the minutes.
- Press the **“PUSH”** button; the display will show the temperature flashing.
- Turn the knob to the **+** or **-** symbol to set the temperature.
- Press the **“PUSH”** button; the display will show the cooking start time flashing.
- Turn the knob to the **+** or **-** symbol to set the preheating start time.
- Press the **“PUSH”** button; the display will show the minutes flashing.
- Turn the knob to the **+** or **-** symbol to set the minutes.
- Press the **“PUSH”** button to exit from the data setting and saving phase. **“PEnd”** appears on the display and after 3 seconds it will display **P40**, the temperature and the preheating start time in succession.
- To start the program press the **“START”** button for at least 2 seconds. The display will show the current time and **“P40A”** until the program is activated at the set time.



The oven will perform preheating at the set time; during this phase the display shows **“P40”**, **“InF”** and the set temperature in succession: the temperature will be kept constant until it is interrupted by the **“STOP”** button.

The program must be activated every day. To reactivate it, set the P40 function and press the **“START”** button for at least 2 seconds.



## 6. CLEANING AND MAINTENANCE



**NEVER USE A STEAM JET TO CLEAN THE APPLIANCE.**



Do not aim water jets directly against the oven; avoid the use of pressure jets.



**Before any intervention, disconnect the oven power supply.**

### 6.1 Cleaning stainless steel



To keep stainless steel in good condition it should be cleaned regularly at the end of the day. Let it cool first.

To clean and preserve stainless steel surfaces, always use **only** specific products that do not contain abrasives or chlorine-based acids.

**How to use:** pour the product onto a damp cloth and wipe the surface, rinse thoroughly and dry with a soft cloth or a microfibre cloth.

Do not use metallic sponges or sharp scrapers as they will damage the surface.

Use ordinary non-abrasive products for steel, with the aid of wooden or plastic utensils if necessary.

Rinse thoroughly and dry with a soft cloth or a microfibre cloth.





## 6.2 Cleaning the oven interior




To keep the oven in good condition it should be cleaned regularly at the end of the day. Let it cool first.


Removing the guide frames makes it easier to clean the oven sides.

To remove the guide frames:


- 1 Pull the frame upwards to unhook it from its two grooves on the lower guide.

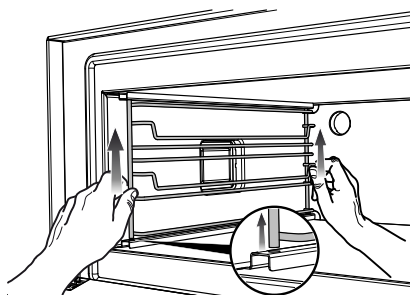

- 2 Turn the frame slightly towards the inside of the appliance.

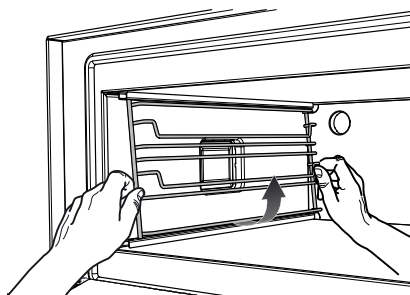

- 3 Pull the frame downwards to unhook it from its two grooves on the upper guide.

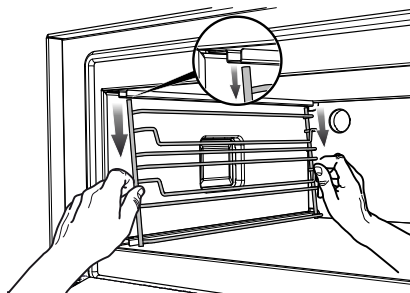



## 6.3 Cleaning the stones

To clean, use a microfibre cloth dampened in water and vinegar; then rinse only with water and leave them to dry.



Do not heat them again if the plates have any encrustations.

- Before cleaning, remove any dirt burnt onto the stone with the aid of a metal spatula or a scraper of the kind used for cleaning glass-ceramic hobs.
- For best results, the stone must still be lukewarm.
- In case of stubborn dirt, use metal mesh sponges or abrasive scotch-brite pads, dipped in vinegar.
- Never use detergents.
- Over time, slight cracks may appear on the surface of the stone. This is due to the normal expansion caused by high temperatures of the enamel coating the stone.




## 6.4 Cleaning and disassembling the door glazing

To facilitate cleaning, it is possible to remove the door (see 7.2 Removing the door) and place it on a canvas, or open it and lock the hinges in order to extract the glass panels.

The glass panels of the door can be completely removed by following the instructions provided below.


### 1 Removing the internal glass panel:

Remove the internal glass panel by pulling it upwards, following the movement indicated by the arrows. Doing this detaches the 4 pins attached to the glass from their slots in the oven door.

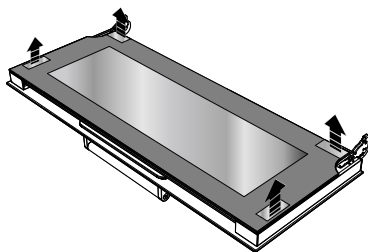


### 2 Cleaning:

It is now possible to clean the external glass panel and the panels removed previously. Use absorbent kitchen roll. In case of stubborn dirt, wash with a damp sponge and neutral detergent.

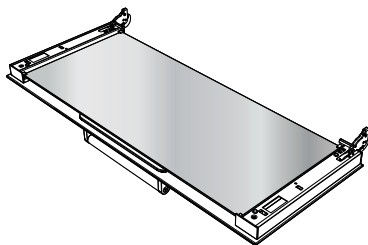

### 3 Replacing the glass panels:

Replace the internal glass panel, taking care to centre and insert the 4 pins attached to the glass into their slots in the oven door by applying slight pressure.

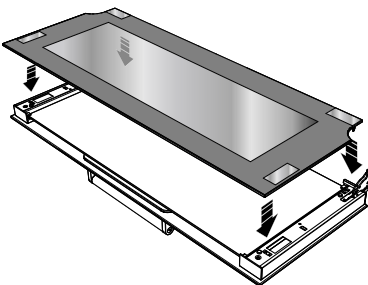

**Attention:** before removing the glass panels, make sure that the door's hinges have been locked in the open position as described in "7.2 Removing the door". This operation may have to be repeated during the glass removal process if the door is accidentally freed.





## 7. EXTRAORDINARY MAINTENANCE

The oven requires periodic minor maintenance or replacement of parts subject to wear, such as gaskets, light bulbs, etc.


Specific instructions for each operation of this kind are given below.



**Before any intervention, disconnect the oven power supply.**

### 7.1 Replacing the light bulb


If a light bulb needs to be replaced because it is worn or burnt out, remove the guide frames; see "6.2 Cleaning the oven interior". Then remove the bulb cover using a tool (e.g. a screwdriver).

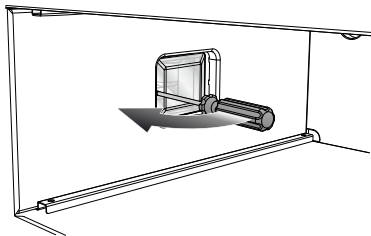

Remove the bulb by unscrewing it as shown.

The bulbs are halogen bulbs, so do not touch them directly with your fingers; wrap them in insulating material instead.


Replace the bulb with one of the same type (40W). After replacement, reassemble the cover.

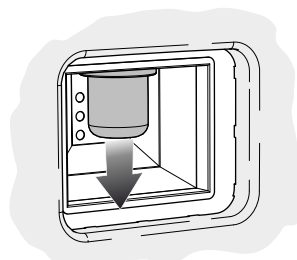




## 7.2 Removing the door


Open the door completely.  
Insert two pins into the holes on the hinges near them until they engage.

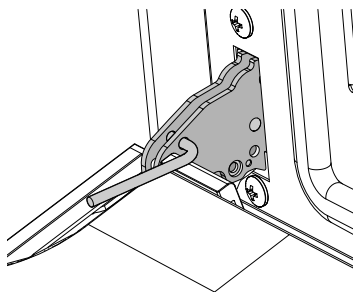

Grasp the door on both sides with both hands, lift it forming an angle of around 30° and remove it.

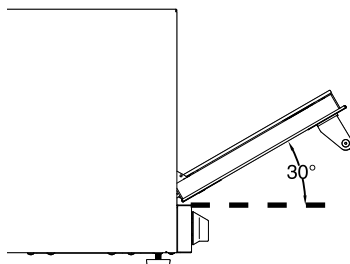

To reassemble the door, put the hinges into the relevant slots in the oven, making sure that the grooved sections **C** are resting completely in the slots. Lower the door and once it is in place remove the pins from the holes in the hinges.

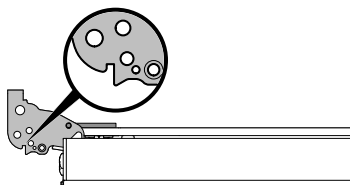



## 8. OVEN INSTALLATION



The oven must be installed on a free-standing horizontal worktop. The distance from the rear wall must allow easy access to the terminal board for connecting the power supply cable. Installation must be carried out by a **qualified technician** and in compliance with EC DIRECTIVES currently in force.

### 8.1 Electrical connection



Make sure the voltage and the cross-section of the power line match the specifications indicated on the identification plate positioned on the side of the oven. **Do not remove this plate for any reason.**

The oven is fitted with a three-core **H07RN-F** cable for operation at **220-240V~** and a power supply plug (on some models only).



The supplied cable is a three-core H07RN-F 3 x 1.5 mm<sup>2</sup> cable.

The power supply cable must be replaced by the manufacturer or by an authorised service centre to prevent any risks.



The plug and wall-mounted socket must be of the same type (in accordance with current regulations). Make sure that the power line is suitably earthed. Avoid the use of adapters and shunts.



If the appliance is connected to the power supply network in a permanent manner, install a multipolar switching device on the line, with contact opening distance equal to or greater than **3 mm** located near the appliance and in an easily reachable position.



**ATTENTION:** if the phase voltage drops below 190V~ , the performance of the oven may suffer, not due to the product itself.



The terminal indicated by this symbol links up parts that are normally earthed. Connect the appliances properly using this terminal in order to make sure that they are equipotential.

#### 8.1.1 Safety thermostat

The oven is equipped with a safety device that triggers in case of serious malfunction. To re-arm the safety device you must contact the technical assistance service.



**The manufacturer declines all responsibility** for damage to persons or things caused by non-observance of the above prescriptions or by tampering with any part of the appliance.



## 8.2 Levelling




Level the oven on the ground using the four adjustable feet. To carry out the adjustment, unscrew the foot. The adjustment screw has a range of 10 mm.

## 8.3 Steam outlet pipe

Depending on the model, there are one or two steam outlet pipes on the back of the oven for releasing the steam produced during cooking. These **must** be left free of any obstruction.


**Avoid crushing them.**

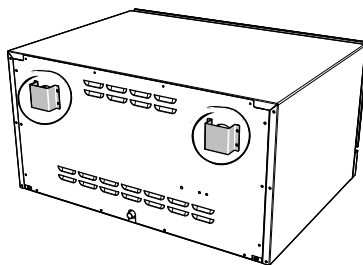

## 8.4 Multiple installations



In case of multiple installations, bring the two products side by side and at a distance of 50 mm from one another and position them at a distance of at least 50 mm from any rear wall and at a distance of 30 mm from any side wall. You must not place appliances on top of each other.

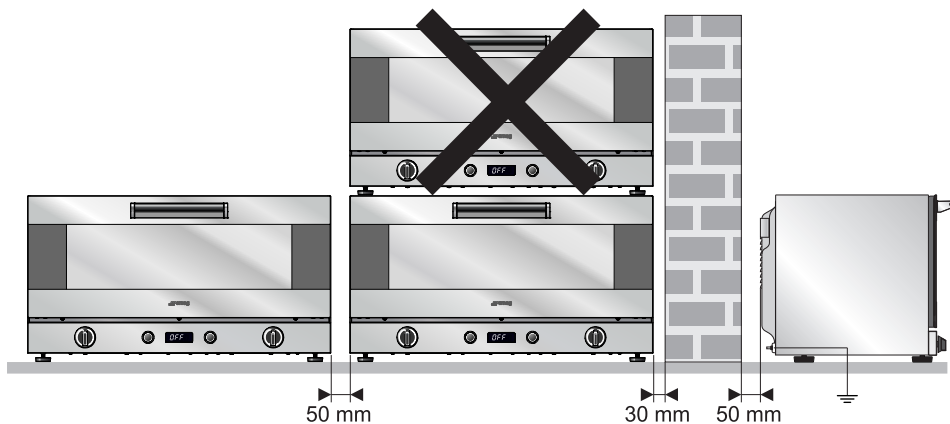

Attention: the support surface of the appliance must not exceed the height of **1.60 m** from the floor.