


# Operating instructions

Commercial refrigerator

Read the operating instructions before switching on for the first time

Page 6

**GB**

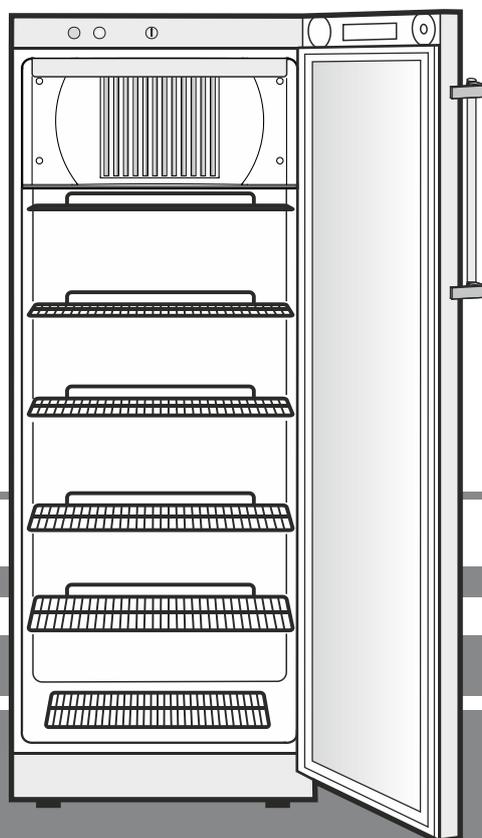

**7083 573-00**

FKv 711

**LIEBHERR**

## Disposal notes

The appliance contains reusable materials and should be disposed of properly - not simply with unsorted household refuse. Appliances which are no longer needed must be disposed of in a professional and appropriate way, in accordance with the current local regulations and laws.



When disposing of the appliance, ensure that the refrigerant circuit is not damaged to prevent uncontrolled escape of the refrigerant it contains (data on type plate) and oil.

- Disable the appliance.
- Pull out the mains plug.
- Cut through the connection cable.

## ! WARNING

Danger of suffocation due to packing material and plastic film! Do not allow children to play with packaging material. Take the packaging material to an official collection point.


## Range of appliance use

The appliance is suitable solely for cooling food in a domestic environment or similar. This includes, for example, use

- in staff kitchenettes, bed and breakfast establishments,
- by guests in cottages, hotels, motels and other forms of accommodation,
- in catering and similar services in the wholesale trade.

Use the appliance solely as is customary within a domestic environment. All other types of use are inadmissible. The appliance is not suitable for storing and cooling medicines, blood plasma, laboratory preparations or similar substances and products covered by the 2007/47/EC Medical Devices Directive. Any misuse of the appliance may result in damage to or spoilage of stored goods. Furthermore, the appliance is not suitable for operation in potentially explosive atmospheres.

## Description of the appliance

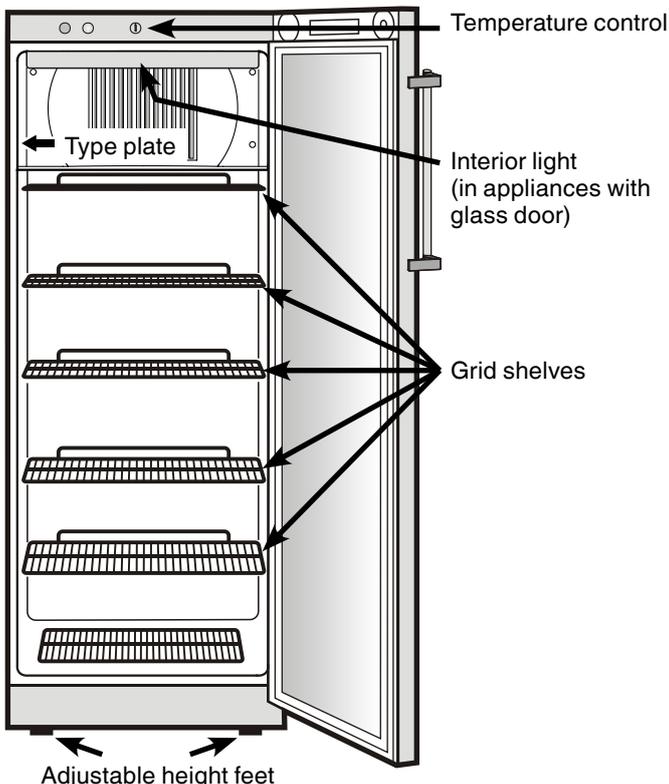

## Safety instructions and warnings


- To prevent injury or damage to the unit, the appliance should be unpacked and set up by two people.
- In the event that the appliance is damaged on delivery, contact the supplier immediately before connecting to the mains.
- To guarantee safe operation, ensure that the appliance is set up and connected as described in these operating instructions.
- Disconnect the appliance from the mains if any fault occurs. Pull out the plug, switch off or remove the fuse.
- When disconnecting the appliance, pull on the plug, not on the cable.
- Any repairs and work on the appliance should only be carried out by the customer service department, as unauthorised work could prove highly dangerous for the user. The same applies to changing the mains power cable.
- Do not allow naked flames or ignition sources to enter the appliance. When transporting and cleaning the appliance ensure that the refrigerant circuit is not damaged. In the event of damage, make sure that there are no ignition sources nearby and keep the room well ventilated.
- Do not stand on the plinth, drawers or doors or use them to support anything else.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given initial supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Avoid prolonged skin contact with cold surfaces or chilled/frozen food. This could cause pain, numbness and frostbite. In the case of prolonged skin contact, protective measures should be taken, e.g. gloves should be worn.
- Do not consume food which has been stored for too long, as it could cause food poisoning.
- Do not store explosives or sprays using combustible propellants such as butane, propane, pentane etc. in the appliance. Electrical components might cause leaking gas to ignite. You may identify such sprays by the printed contents or a flame symbol.
- Do not use electrical appliances inside the appliance.
- If you have a lockable appliance, do not keep the key near the appliance or within reach of children.
- The appliance is designed for use in enclosed areas. Do not operate the appliance outdoors or in areas where it is exposed to splash water or damp conditions.
- Special-purpose lamps (incandescent lamps, LEDs, fluorescent tubes) in the appliance serve to illuminate the appliance interior and are not suited for room illumination.
- When transporting or operating the appliance at an altitude of more than 1500 m above sea level, the glass pane in the door can break due to the reduction in air pressure. Broken fragments are sharp-edged and can cause serious injury.

## Climate rating

The climate rating indicates the room temperature at which the appliance may be operated in order to achieve full refrigeration performance.

The climate rating is indicated on the type plate.

The position of the type plate is shown in the description of the appliance.

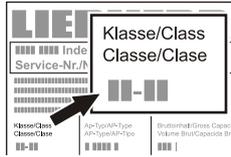

Climate rating	Room temperature
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T	+16°C to +43°C
SN-ST	+10°C to +38°C
SN-T	+10°C to +43°C

**Do not operate the appliance outside the specified room temperature range.**

## Setting up

- Avoid positioning the appliance in direct sunlight or near cookers, radiators and similar sources of heat.
- The floor on which the appliance stands should be horizontal and level. Compensate for uneven floors with the adjustable feet.
- Always ensure that there is good ventilation and that the outward flowing air is able to escape.
- Standard EN 378 specifies that the room in which you install your appliance must have a volume of 1 m<sup>3</sup> per 8 g of R 600a refrigerant used in the appliance, so as to avoid the formation of inflammable gas/air mixtures in the room where the appliance is located in the event of a leak in the refrigerant circuit. The quantity of refrigerant used in your appliance is indicated on the type plate on the inside of the appliance.
- Always install the appliance directly against the wall.

## Dimensions

	Height	Width	Depth
FKv 26 .....	1250	600	610
FKv 36 .....	1640	600	610
FKv 41 .....	1800	600	610
FKv 54 .....	1640	750	730

## Electrical connection

Only operate the appliance with **alternating current (AC)**.


The permissible voltage and frequency are indicated on the type plate. The position of the type plate is shown in the description of the appliance.

The socket must be properly earthed and protected by a fuse.

The tripping current of the fuse must be between 10 A and 16 A.

The socket must not be situated behind the appliance and must be easily accessible.

Do not connect the appliance using an extension cable or extension socket.

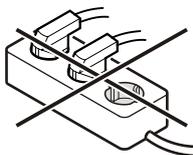

## Switching the appliance on and off

You are recommended to clean the appliance before switching it on for the first time (see **Cleaning**).


**To switch the appliance on:** Connect the appliance to the mains - the appliance is switched on.

**To switch the appliance off:** Pull out the mains plug or set the temperature control to **0**.

## Setting the temperature

Using a coin, turn the arrow on the temperature control to a setting between **0** and **max.**

The nearer the temperature control is to the **max.** setting, the colder the interior temperature.

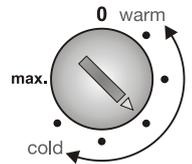


## Cooling

This appliance can be used for chilling all types of drinks and food.

The grid shelves can be moved to accommodate different height bottles or packages. To remove the shelves the door must be opened wider than 90°.

High-percentage alcohols should be tightly sealed and stored upright.

**The ventilation slots on the inside must not be covered!**

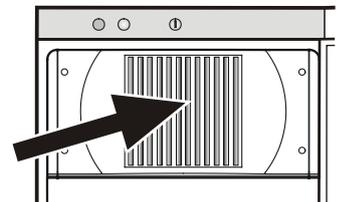


## Safety lock

The lock in the appliance door is equipped with a safety mechanism.

**Locking the appliance:**

- Insert the key as shown by arrow 1.
- Turn the key 90° anticlockwise.


To unlock the appliance, the same procedure must be repeated in the same order. Turn the key clockwise.

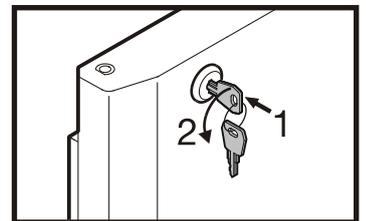

## Interior light in appliances with glass door

The interior light is fitted on the inside at the top.

It can be switched on and off by pressing the switch **Light**.

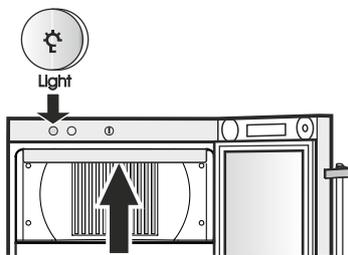

**Caution - class 1M laser radiation. When cover is removed, do not look directly at light through optical instruments.**



**The lighting may only be replaced by the customer service technician or by competent skilled personnel!**

## Temperature display

The thermometer is located in the upper part of the door. The temperature display is powered by a battery which is available from your specialist dealer.

### Changing the battery

- Open the door.
- Detach cover **A**.
- Pull out thermometer **T**.
- Open the battery compartment using a small screwdriver.
- Replace the battery.
- Close the battery compartment.
- Re-install all parts.

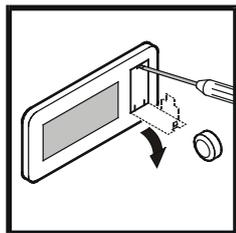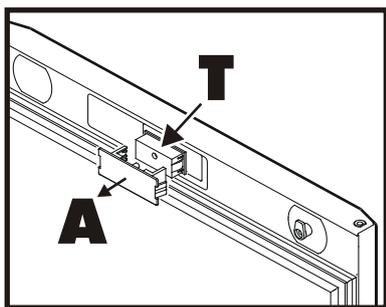

If **Er** or **HH** appears in the display, the appliance has a fault. Consult the customer service department indicating the fault number displayed.

## Defrosting

The refrigerator compartment defrosts automatically.

When operating at the coldest thermostat setting, the interior rear wall may, however, ice up. In this case, the appliance must be defrosted manually.

- Switch the appliance off to defrost. Pull out the mains plug or set the temperature control to 0.
- Remove the food from the appliance and store in a cool place.
- Leave the door of the appliance open while defrosting. After defrosting mop up the remaining water and clean the appliance.

**Do not use any mechanical devices or other artificial aids for defrosting other than those recommended by the manufacturer.**

## Cleaning

**Before cleaning always switch off the appliance. Pull out the mains plug or remove/unscrew the fuse.**

Clean the inside, equipment parts and outer walls with lukewarm water and a little detergent. Do not use abrasive or acid cleaners or chemical solvents.

**Do not use steam cleaners because of the risk of injury and damage.**

- Ensure that no cleaning water penetrates into the electrical components or ventilation grille.
- The dust should be removed from the refrigeration unit and heat exchanger - metal grid at the back of the appliance - once a year.
- Clean the drain hole in the refrigerator compartment with a thin object, e.g. cotton swab or the like.
- Do not damage or remove the type plate on the inside of the appliance. It is very important for servicing purposes.

## Malfunctions

**You may be able to rectify the following faults by checking the possible causes yourself:**

### • Appliance does not function:

- Is the appliance switched on?
- Is the plug correctly fitted in the mains socket?
- Is the socket fuse intact?


### • Loud running noise:

- Is the appliance set up firmly on the floor?
- Does the appliance cause nearby items of furniture or objects to vibrate? Please note that noises caused by the refrigerant circuit cannot be avoided.

### • The temperature is not low enough:

- Is the temperature setting correct (see **Setting the temperature**)?
- Have excessive amounts of fresh food been placed in the appliance?
- Does the separately installed thermometer show the correct reading?
- Is the ventilation system working properly?
- Is the appliance set up too close to a heat source?

If none of the above causes apply and you cannot rectify the fault yourself, contact the nearest customer service department stating the type of appliance ①, service number ② and appliance number ③ as indicated on the type plate. The position of the type plate is shown in the description of the appliance.

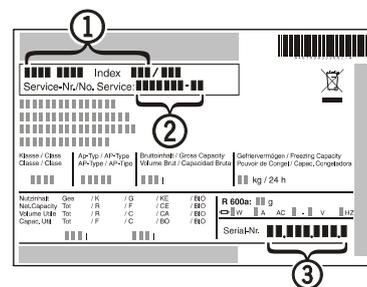

## Shutting your appliance down

If your appliance is to be shut down for any length of time, switch it off and disconnect the plug or remove the fuse. Clean the appliance and leave the door open in order to prevent unpleasant smells.


The permissible room temperature for storing the appliance after decommissioning is between -10°C and +50°C.

Storing the appliance outside this temperature range can damage the appliance and cause it to malfunction.


The appliance complies with the relevant safety regulations and EC directives 2004/108/EC and 2006/95/EC.

## Changing over door hinges

- 1.** Pull out the circlip from the lower hinge bracket.

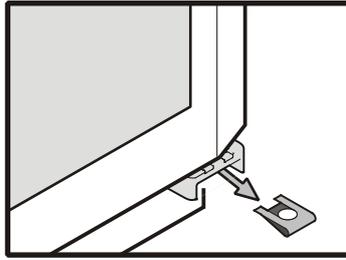


- 2.** Remove cover plate.  
**3.** Unscrew the hinge pin from the upper hinge bracket.

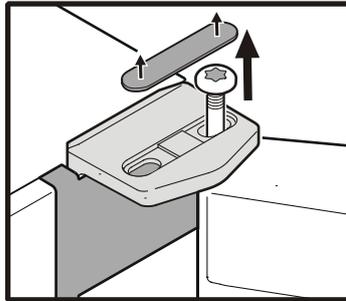


- 4.** Remove the door.


- 5.** Transfer clamping plate.

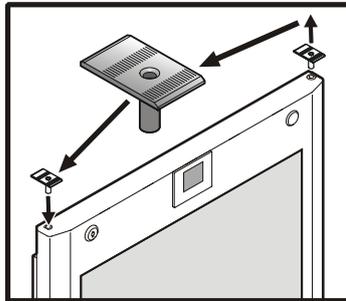


- 6.** Transfer hinge components and cover plates to the opposite side.

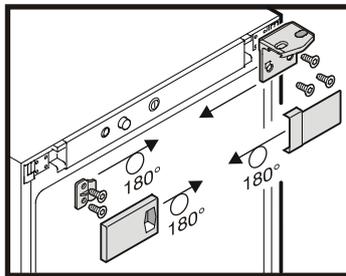


- 7.** Transfer lower hinge bracket and cover plate to the opposite side.

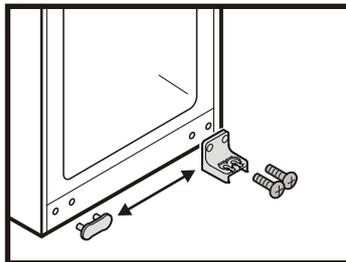


- 8.** Transfer lock and cover plates to the opposite side of the door.

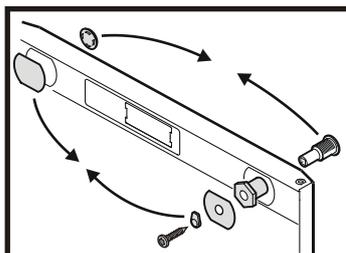

- 9.** Transfer handle and plugs to the opposite side of the door.

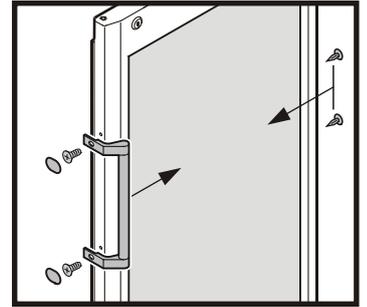


- 10.** Pull out the torque rod from the right-hand door mounting. The bar is approx. 1130 mm long.

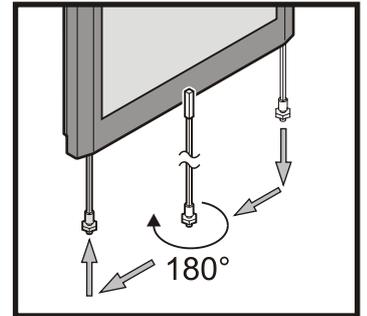


- 11.** Turn the torque rod through 180° horizontally and insert into the left-hand door mounting.

- 12.** Place the door on the lower hinge bracket.

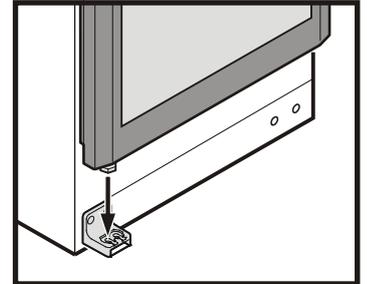


- 13.** Screw in the hinge pin.

- 14.** Align the door at the side and tighten the hinge pin.  
**15.** Replace cover plate.

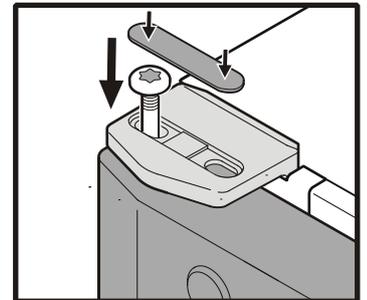

- 16.** Tighten the torque rod with the open-ended spanner provided. > 60°

The hexagon of the torque rod will lock into the lower hinge bracket.

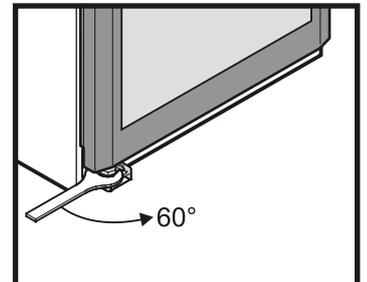

- 17.** Fit the circlip on the lower hinge bracket.

